MOTION QUICK REFERENCE GUIDE

Motor LED flashes red Battery needs charging

Blind does not work Click link below Blind does not work. Roller CM-03/CM-05 (motion-blinds.com)


Blind is not charging

Charger is not plugged in or does not work. Try a different charger or make sure the charger is plugged in the outlet


The blind keeps moving up and down The blind is in program mode.

Press the program button on the motor to exit program mode.


Blind moves in the opposite direction

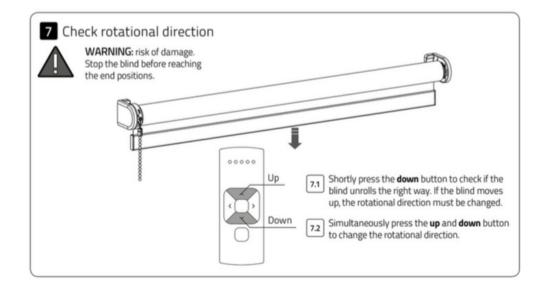

Blind moves in small steps

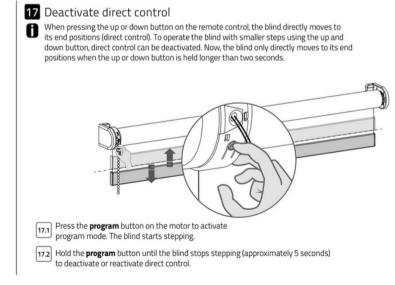

Multiple blinds respond to a remote. (Unable to program a single blind) Multiple blinds are paired with a single channel. Pair the blind with a free channel to program or use single select to program the blind.

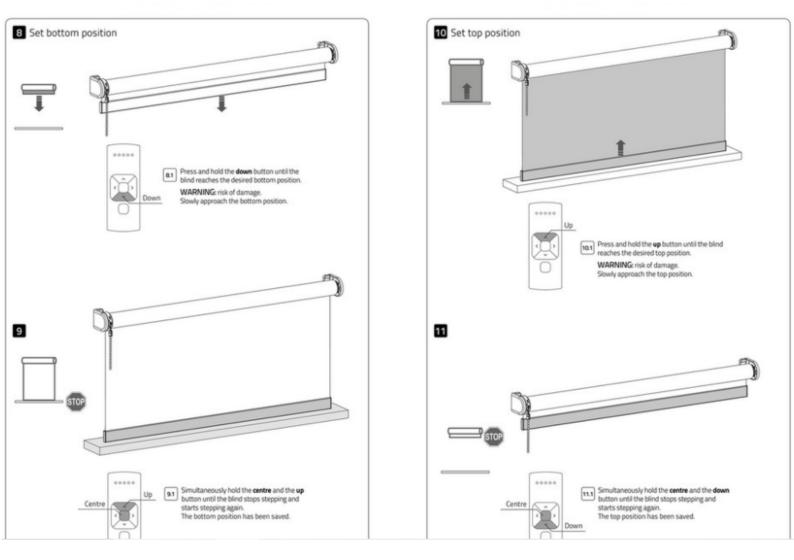

Setting bottom and top limits

5 Channel Remote Instructions

Motion-blinds - Manual_User_MOTION_CM-12_842 - Page 1 (publitas.com)

15 Channel Remote Instructions

Motion-blinds - Manual User MOTION CM-13 842 - Page 1 (publitas.com)

Connecting to Google assistant

Connect MOTION with Google Assistant (motion-blinds.com)

Connecting to Alexa

Connect MOTION with Amazon Alexa (motion-blinds.com)

Videos to send to customers if needed

How to program and operate the blind

Illumin8 Motion - Setting up your blind - Pull + Remote - YouTube

How the Wi-fi Bridge works

Illumin8 Motion - App Control and Wi-fi Bridge - YouTube

MOTION control options

illumin8 MOTION - Controls Options - YouTube

MOTOR INSTRUCTION MANUAL (Blinds 65cm +)

Motion-blinds - Manual User MOTION CM-03-05 - Page 1 (publitas.com)

MOTOR INSTRUCTIONAL MANUAL (Blinds between 45cm - 65cm)

Motion-blinds - Manual User MOTION CMD-02 - Page 1 (publitas.com)

Key notes they may come up

- Only one account can be used per motion bridge, If another account connects to bridge the original account will be kicked off.
 To use the Motion app on multiple phones simply log in to the motion account on both devices.
- Any blind under 65cm will not have the PULL function