




TruFit™ Measure Guide

To Measure for a TruFit™ Blind, follow the below steps:

- 1 Measure bead width & bead depth
- 2 Check grid for deductions/additions
- 3 Measure exposed glass size
- 4 Order blind as BLIND SIZE

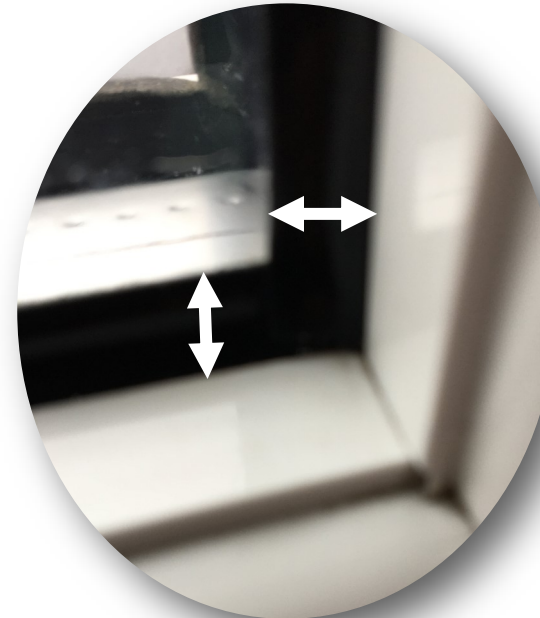


Window beading -
Measure the width & depth of beading



No window beading -
Measure exposed glass size

1

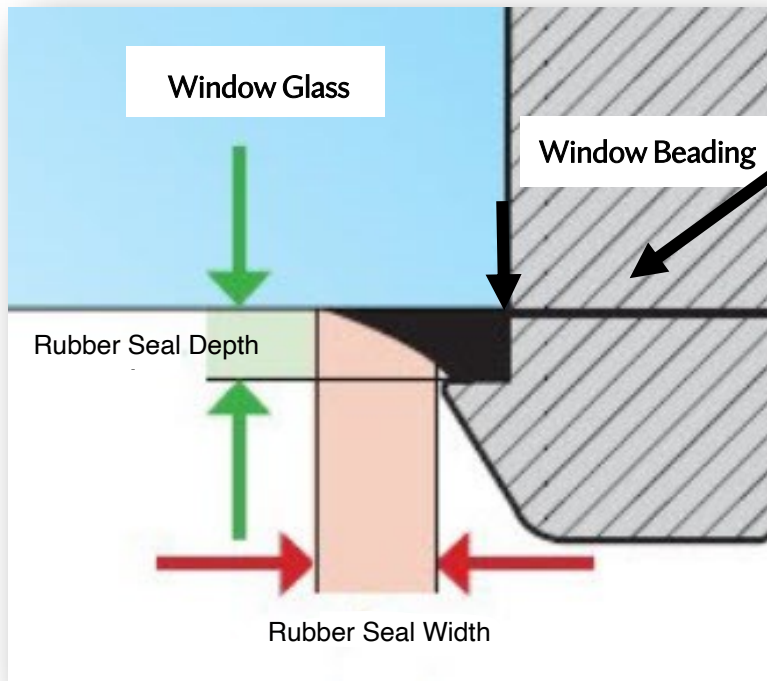

Rubber Seal Depth



TruFit™ Measure Guide

2

		Rubber Seal Width			
		0mm	1mm - 4mm	5mm	6mm +
Rubber Seal Depth	0mm	Measure exposed glass	W = - 3mm H = - 3mm	Measure exposed glass	W = - 1mm H = - 1mm
	1mm - 4mm	Measure exposed glass	Measure exposed glass	Measure exposed glass	W = + 7mm H = + 7mm
	5mm	Measure exposed glass	W = + 4mm H = + 3mm	Measure exposed glass	Measure exposed glass
	6mm +	Measure exposed glass	Measure exposed glass	Measure exposed glass	Measure exposed glass

** Please Order ALL sizes as **Blind Size****



TruFit™ Measure Guide

3 Measuring exposed glass

