




Easi-Pleat  
Motor easy  
set-up guide

# EXCEL

## STEP 1: RESETTING

Reset to Factory Settings

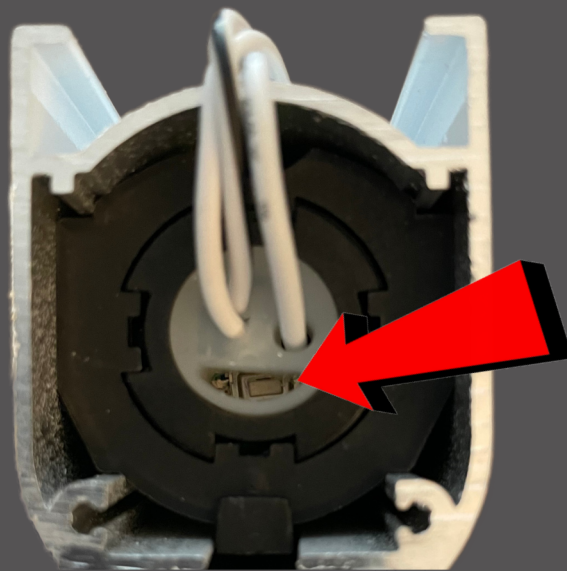

Press and hold the reset  
button inside the headrail  
until the motor jogs  
up and down 4 times

# EXCEL

## STEP 2: PAIRING

Select the required channel (if using multi channel remote).

Press the Program Button for 2 sec.

The blind will jog once.

Press the Stop Button for 2 sec.

The blind will jog twice.

The Remote & Motor are now paired



# EXCEL

## STEP 3: CHECKING DIRECTION

If the direction needs to be changed press the Up & Down buttons together for 2 sec.

The motor will jog once.  
The direction is now changed.





# EXCEL

## STEP 4:

### SETTING UPPERLIMIT


Press the Up button for 3 sec.

The blind will travel up.

Use the stop button when close to the upper limit, then adjust by using the Up & Down buttons.

Press the Up & Stop buttons together until the motor jogs twice.

The upper limit is now set.

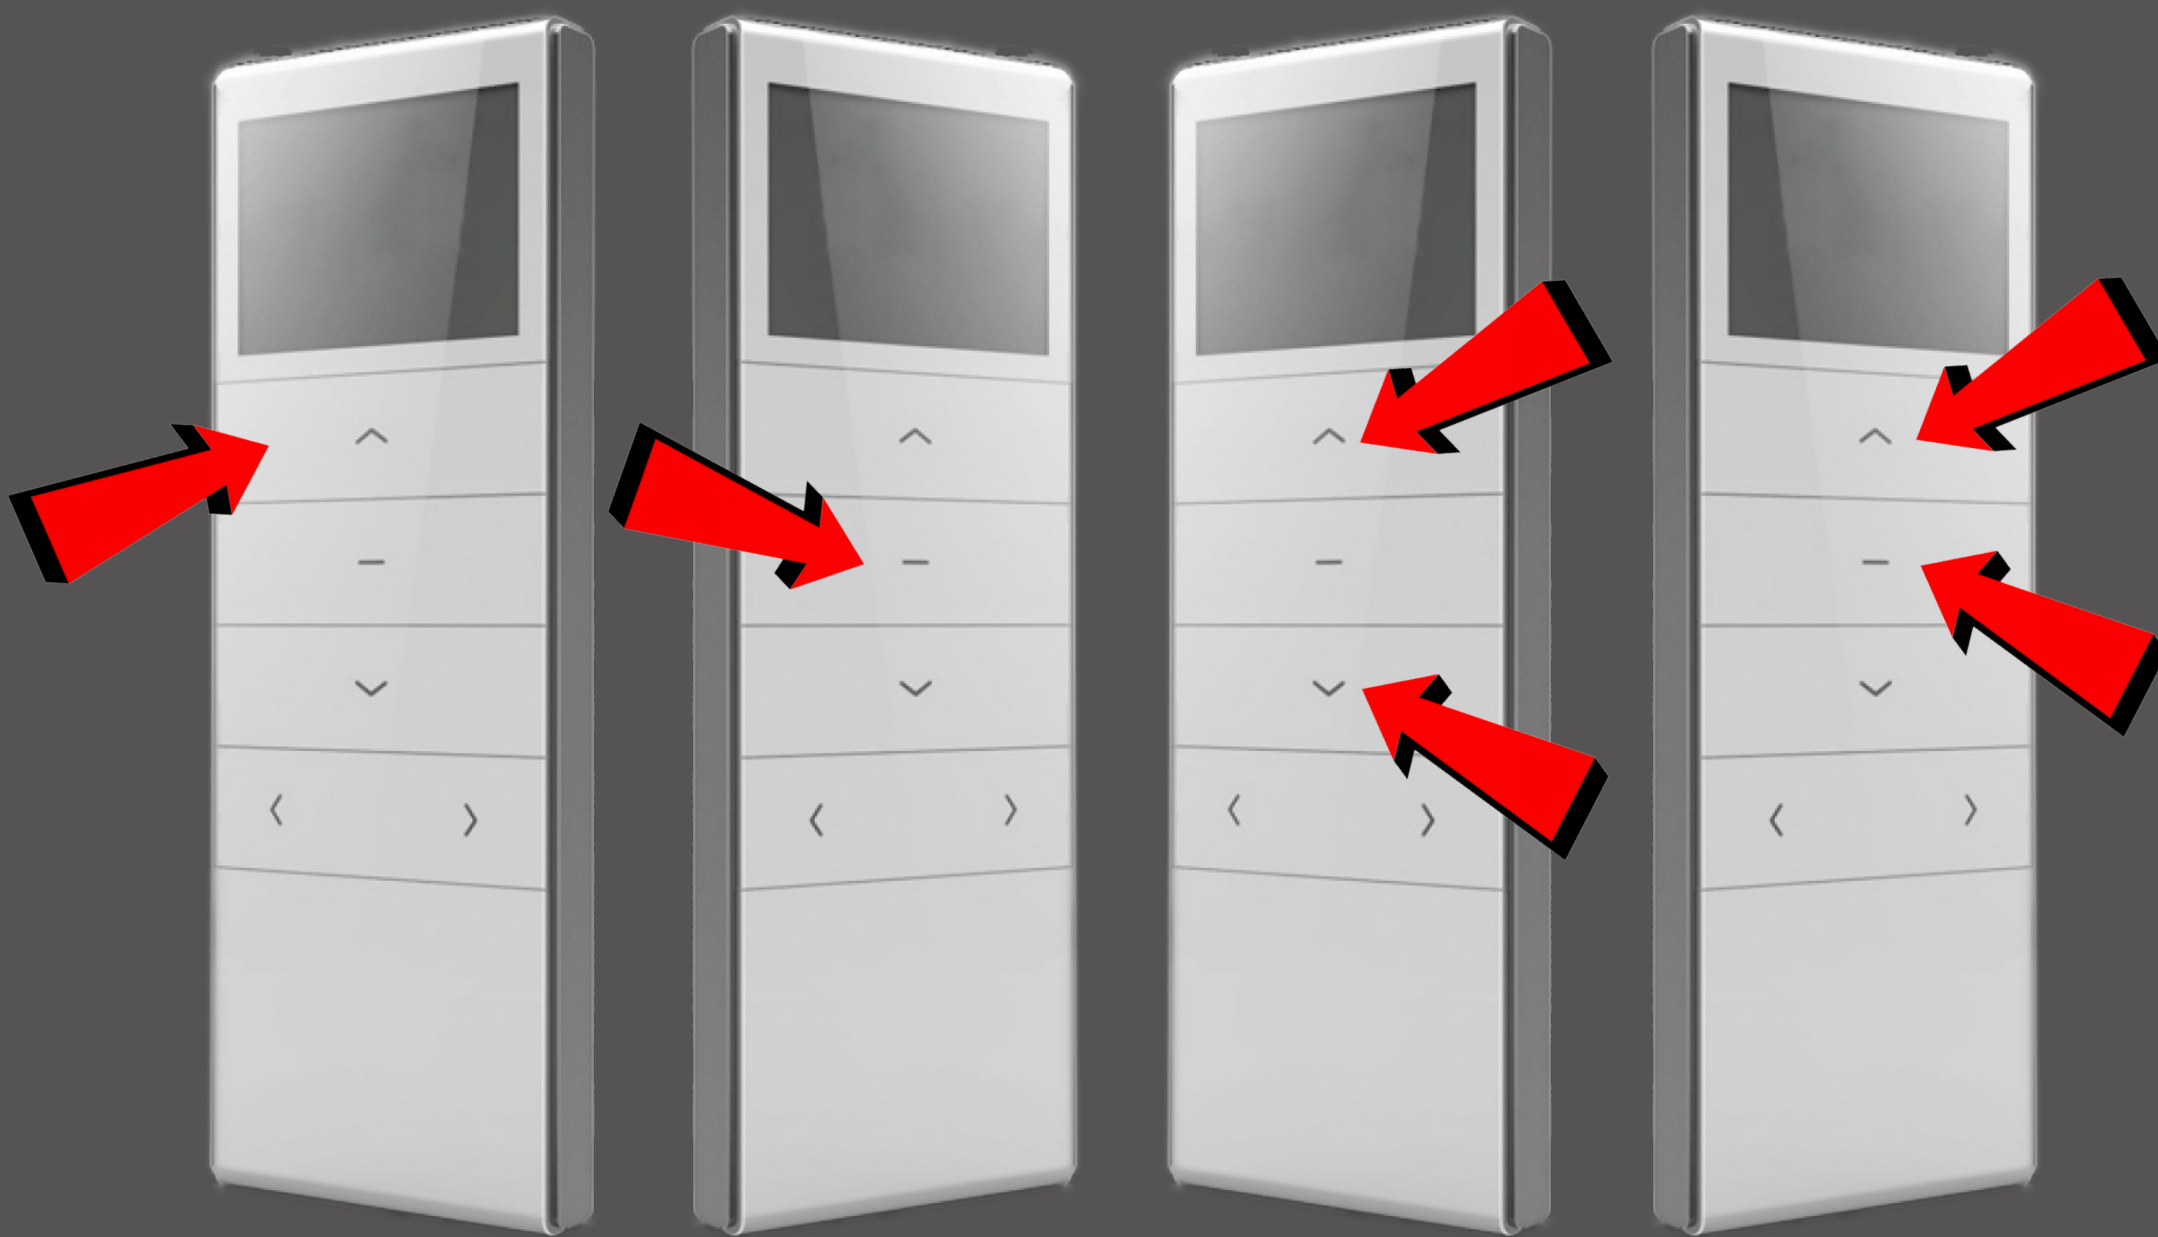



# EXCEL

## STEP 5:

## SETTING LOWER LIMIT


Press the Down button for 3 sec.

The blind will travel down.

Use the stop button when close to the lower limit, then adjust by using the Up & Down buttons.

Press the Down & Stop buttons together until the motor jogs twice.

The lower limit is now set.

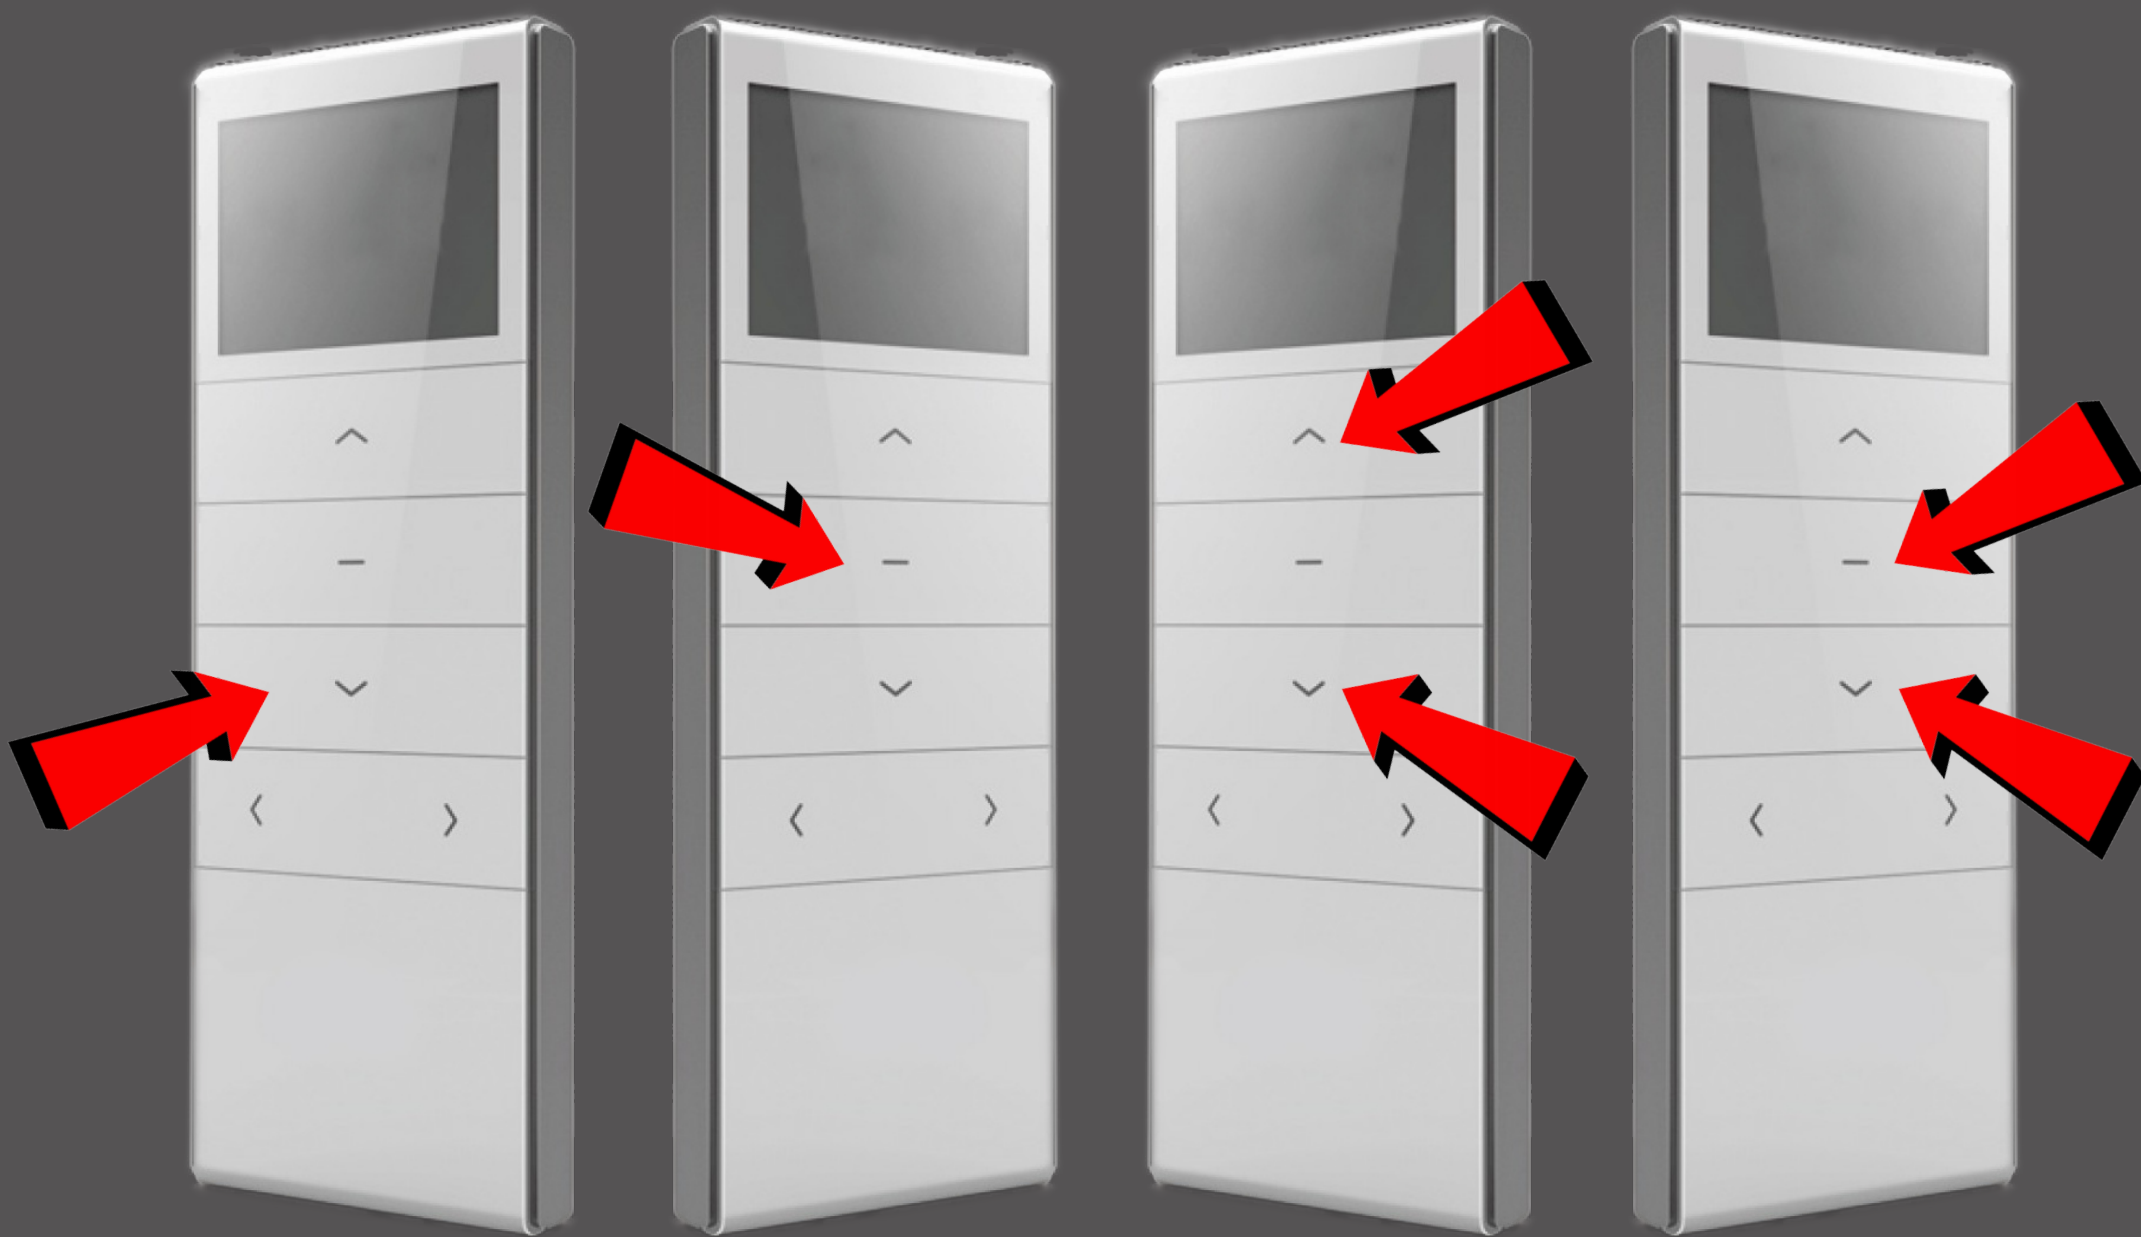





# EXCEL

## STEP 6:

## FAVOURITES POSITION

Take the blind to the required position.

Remove battery casing on remote.

Press the P2 Button, the motor will jog.

Press the Stop button, the motor will jog.

Press the Stop button a 2nd time, the motor will jog twice.


Favourites Position is now set.



# EXCEL

## STEP 7: ADJUSTING SPEED

To adjust speed of motor press P2 Button & the blind will jog. Press the Up or Down button (depending on whether you want the blind to travel quicker or slower) & the blind will jog. Press the Up or Down button again & the blind will now jog twice. Speed is now adjusted.

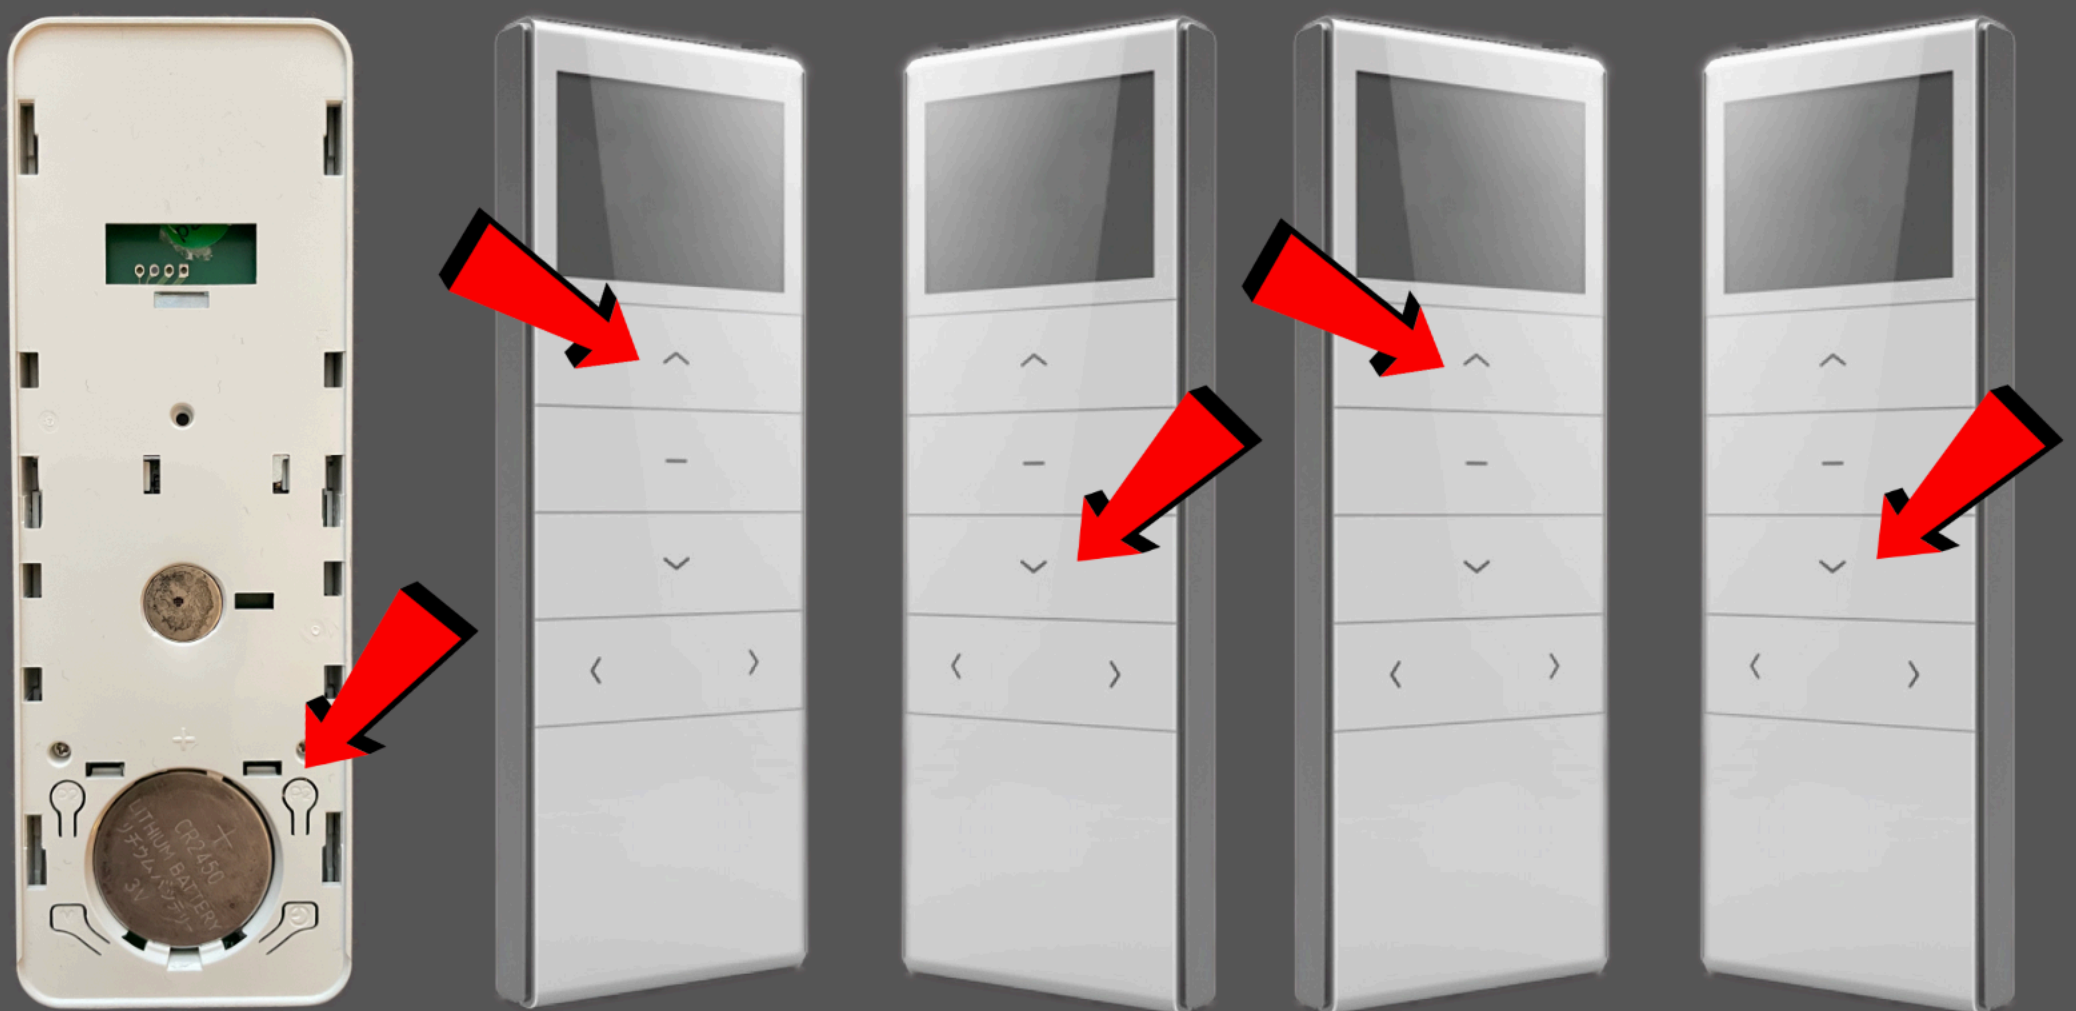



# EXCEL


## STEP 7: RE-ADJUSTING UPPERLIMIT

Press the Up & Stop buttons for 5 sec.  
The blind will jog.

Adjust to the new upper limit using the  
Up & Down buttons on the remote.

Press the Up & Stop buttons together  
for 2 sec, the motor jogs twice.

The re-adjusted upper limit is now set.

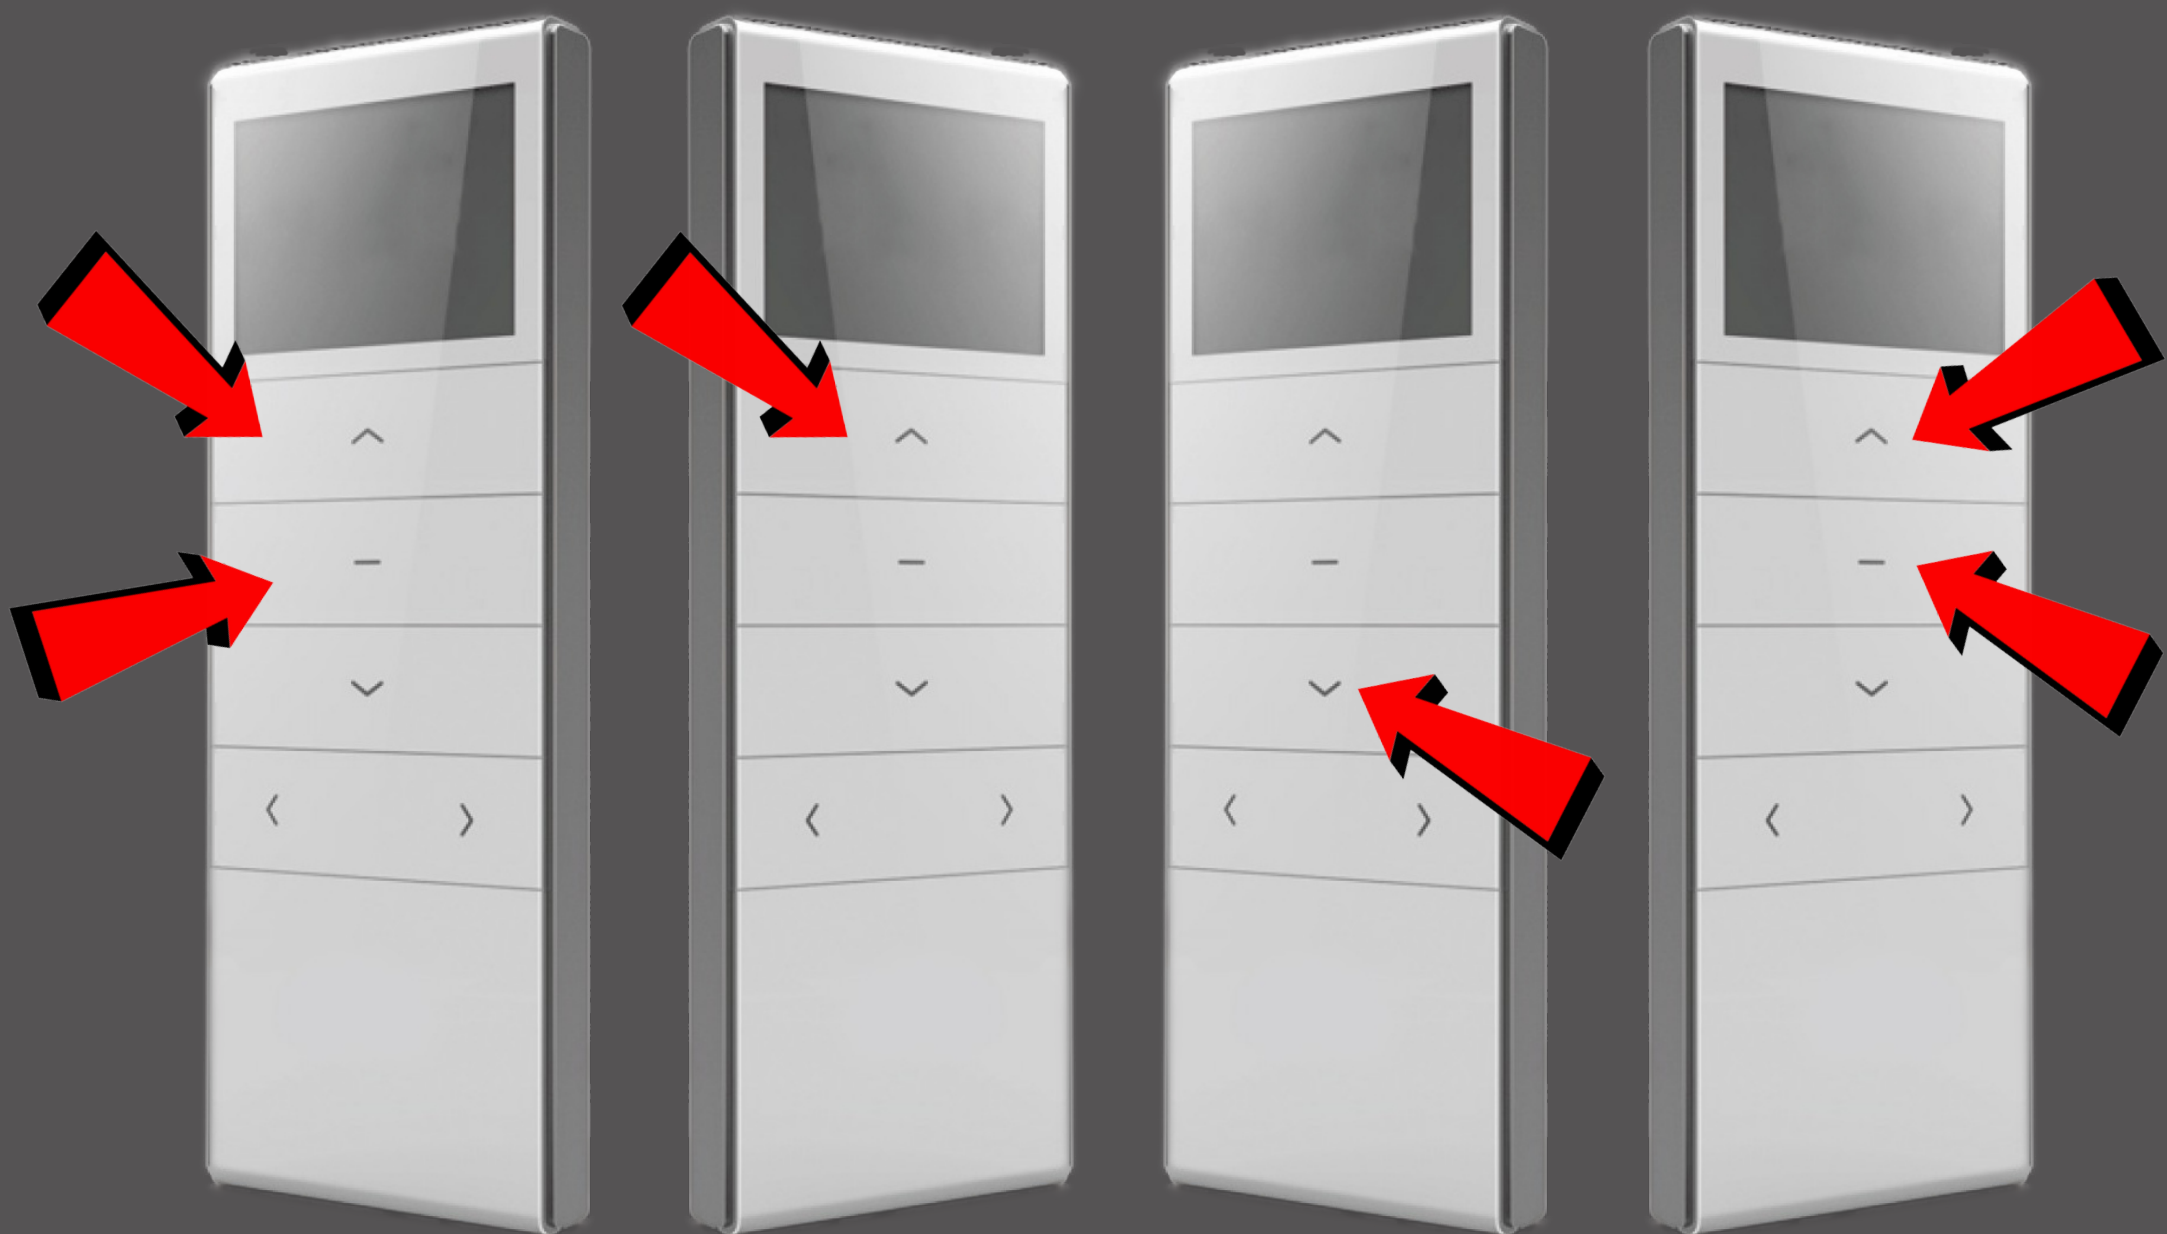



# EXCEL

## STEP 8:

### RE-ADJUSTING LOWER LIMIT

Press the Down & Stop buttons for 5 sec.

The blind will jog.

Adjust to the new lower limit using the Up & Down buttons on the remote.

Press the Down & Stop buttons together for 2 sec, the motor jogs twice.

The re-adjusted lower limit is now set.

